


Product Overview

Product Introduction

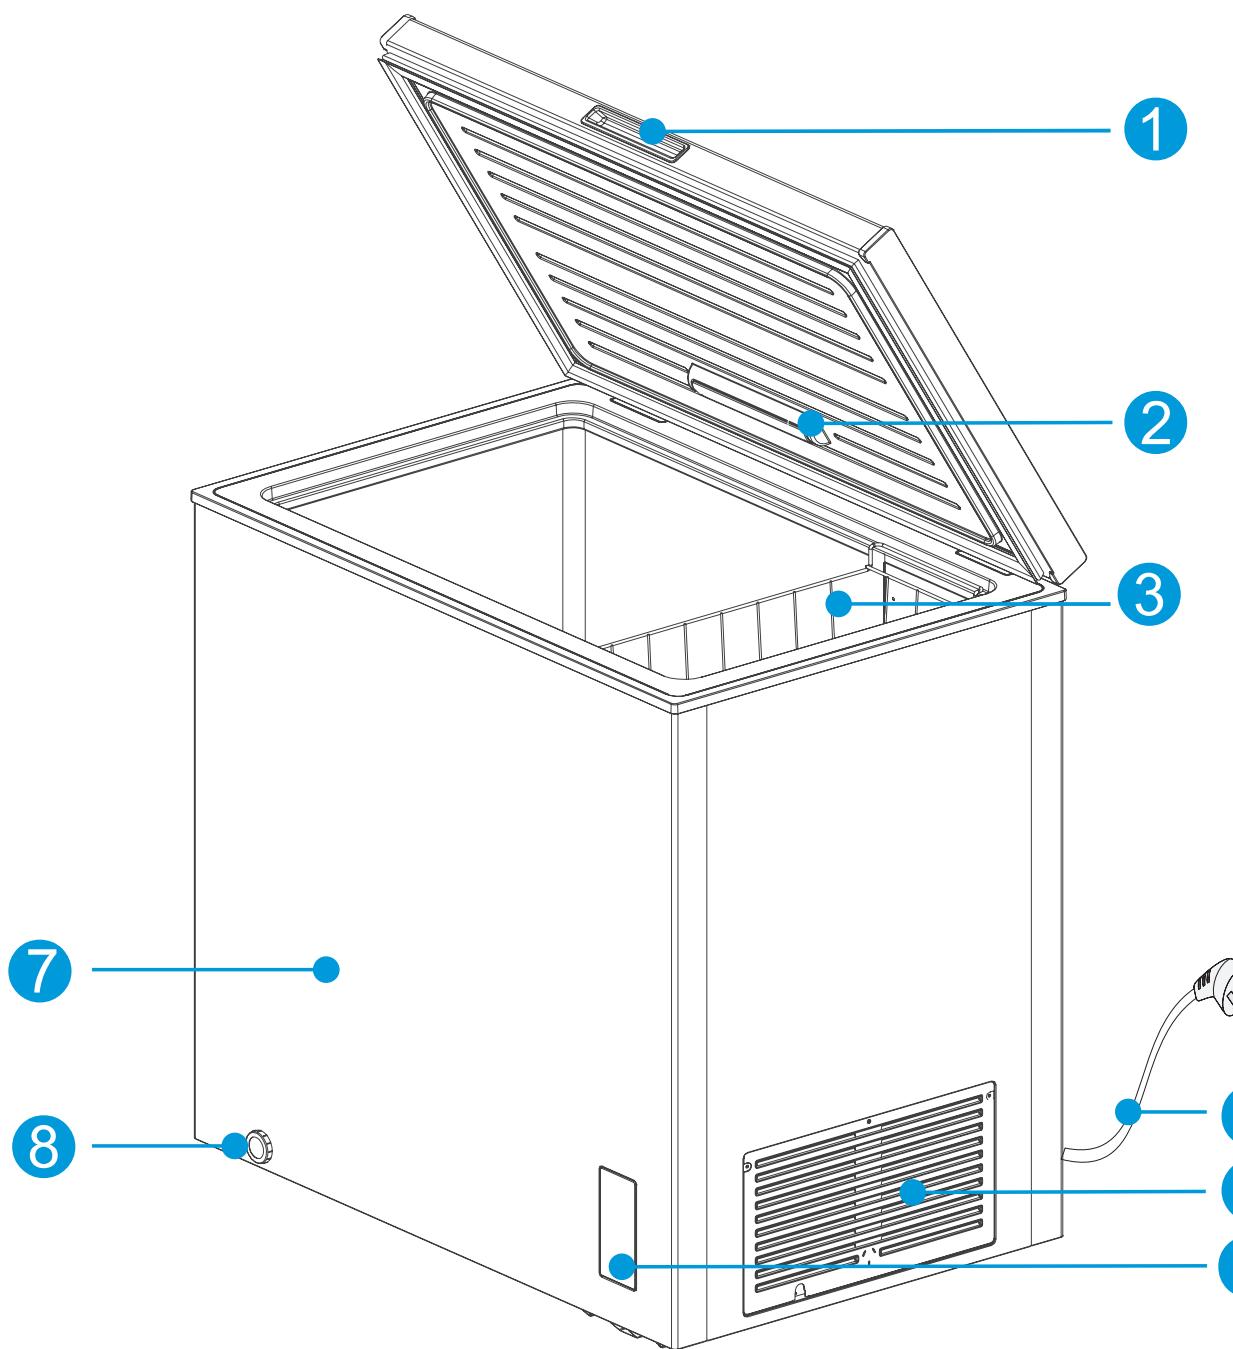

Product Installation

Before first use

Remove the exterior and interior packing, wipe the outside thoroughly with a soft dry cloth and the inside with a wet, cloth.

Avoid placing the cabinet in a narrow recess or near any heat source, direct sunlight, or moisture.

Adequate air circulation is required for efficient operation. the recommended clearance to ensure adequate air circulation.


Before connecting your freezer to the power supply, check the voltage stated on the rating label of your appliance corresponds to the voltage in your home. A different voltage could damage your appliance.

The appliance must be grounded. The manufacturer is not responsible for damages that may occur as a result of using the appliance without proper grounding.

Recommended clearance

Product Operation

Control panel

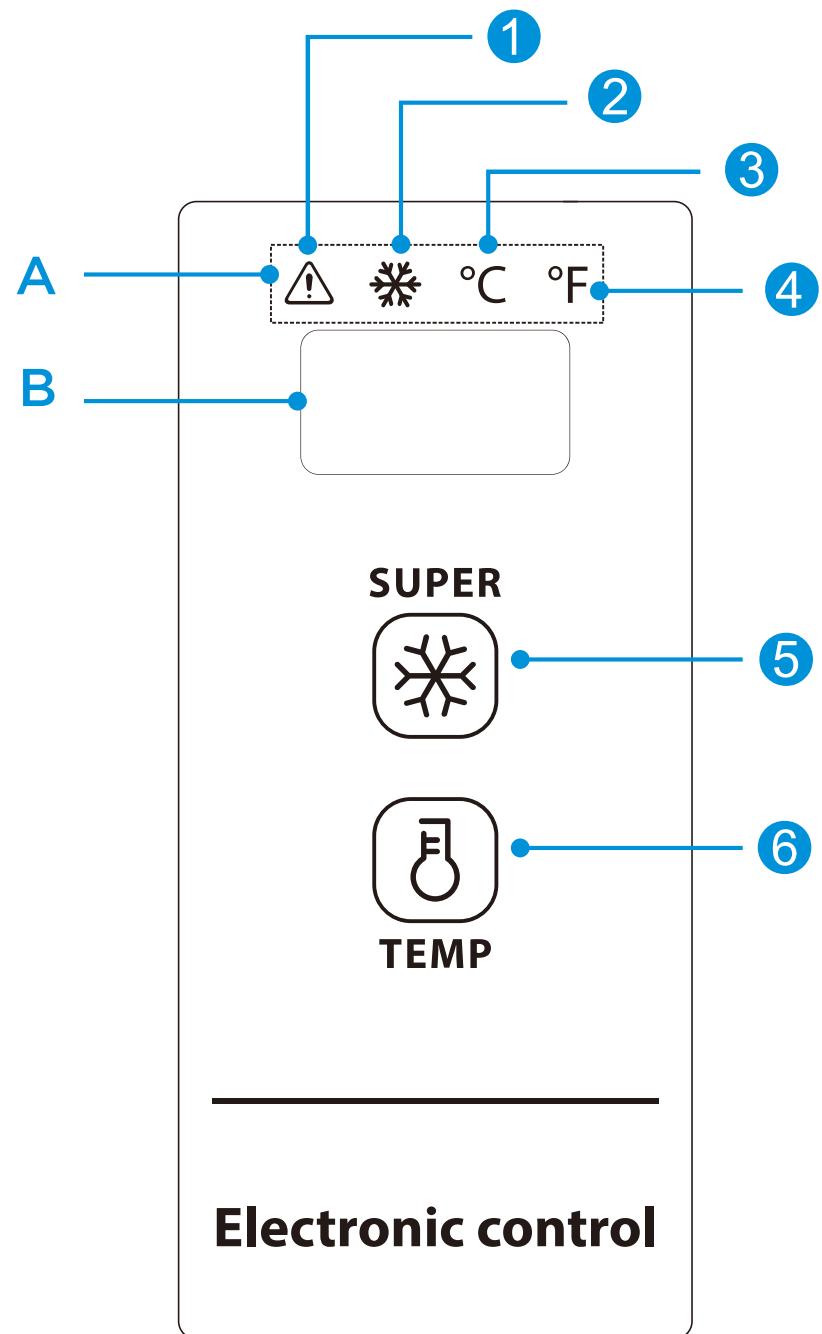

Maintenance Tip

Overall cleaning

- Disconnect the appliance from the electrical supply before undertaking any routine maintenance. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not try to repair, disassemble or modify the appliance yourself. In case of repair please contact our customer service.
- Eliminate the dust on the back of the unit at least once a year to avoid hazard by fire, as well as increased energy consumption.
- Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- The interior of the product should be cleaned regularly to avoid odor.
- Use a soft cloth or sponge to clean the inside of the product with two tablespoons of baking soda and a quart of water.

Troubleshooting

**You may try to solve the following simple problems by
If them cannot be solved, please contact the after-sale
department.**

Failed operation	<ul style="list-style-type: none">• Check whether the appliance is connected or whether the plug is in well contact• Check whether the voltage is too low• Check whether there is a power failure or circuits have tripped
Odor	<ul style="list-style-type: none">• Odorous foods shall be tightly wrapped• Check whether there is any rotten food• Clean the inside of the refrigerator
Long-time operation of the compressor	<ul style="list-style-type: none">• Long operation of the refrigerator is normal in summer• when the ambient temperature is high It is suggestible having too much food in the refrigerator at the same time• Food shall get cool before being put into the appliance• The doors are opened too frequently
Light fails to get lit	<ul style="list-style-type: none">• Check whether the refrigerator is connected to the power supply and whether the illuminating light is normal• Have the light replaced by a specialist
Door can not be properly closed	<ul style="list-style-type: none">• The door is stuck by food packages Too many food packages are placed

Tips & Tricks

Storing food

Freezer compartment

The freezer compartment is designated for the low-temperature freezing of food, long-term storage of frozen food, and for the production of ice cubes.

Do not put fresh and frozen food next to each other. The frozen food may thaw.

When freezing large amounts of fresh food (such as meat, fish, or chopped meat), please divide them into several small pieces before putting in, so that they can be quickly frozen and pick up easily.

Abide by the storage times recommended by food manufacturers. If there is no information on the packages, there is no information on the packaging, food should not be stored frozen for longer than three months from the date of purchase.

When purchasing frozen food, make sure that it was frozen at a suitable temperature and that the packaging is not damaged.

Frozen food should be kept in suitable individual packages to prevent that adjacent food cannot be contaminated. Consume thawed and defrosted foods immediately, do not refreeze them.

In case of prolonged power failure or malfunction of the appliance, remove the stored frozen food and check whether they are still frozen, then store them in a sufficiently cool place or in another appliance.