

USER MANUAL

MDRS761MYC*

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.

The diagram above is just for reference. Please take the appearance of the actual product as the standard.

LANGUAGES

EN	English
DE	Deutsch
IT	Italian
FR	French
ES	Spanish
PT	Portuguese
GR	Greek
PL	Polish
LV	Latvian
SR	Serbian
HR	Republika Hrvatska
HU	Hungary
SL	Slovenia
RO	Romania
BG	Bulgaria
LT	Lithuania
AL	Albanian
CZ	Czech
SK	Slovak

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

EN

THANK YOU LETTER01
SPECIFICATIONS 02
PRODUCT OVERVIEW03
PRODUCT INSTALLATION04
OPERATION INSTRUCTIONS10
CLEANING AND MAINTENANCE17
TROUBLESHOOTING19
APPENDIX 21


ENL

SPECIFICATIONS

Product model	MDRS761MYC
Rated Voltage/Frequency	220-240V~/50Hz
Rated Current	1.9A
Total Volume	573L
Fresh Food Storage Compartment Volume	376L
Four-star Compartment Volume	197L
Freezing Capacity	12kg/24h
Temperature Rise Time	5,5h
Overall Dimension (W x D x H)	910×698×1793mm

PRODUCT OVERVIEW

Names of components

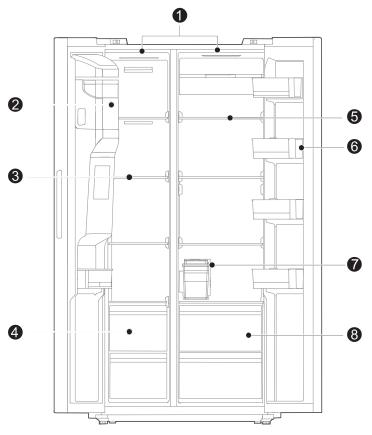

- 1 LED Lighting
- 2 Ice maker and Ice storage bin
- **3** Freezer glass shelf
- 4 Freezer Drawer
- 5 Refrigerator glass shelf

EN

- 6 Door tray
- **7** water tank
- 8 Fruits and vegetables box

ATTENTION

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor.

PRODUCT INSTALLATION

Install Instruction

ΕN

For refrigerating appliances with climate class

- Depending on the climate class, this refrigerating appliance is intended to be used at ambient temperatures range as specified following table.
- The climate class can be found on the rating plate. The product may not operate properly at temperatures outside of the specific range.
- You can find the climate class on the product label.


Effective temperature range


 The product is designed to operate normally in the temperature range specified by its class rating.

Class	Symbol	Ambient temperature range °C		
Class		IEC 62552 (ISO 15502)	ISO 8561	
Extended temperate	SN	+ 10 to + 32	+ 10 to + 32	
Temperate	N	+ 16 to + 32	+ 16 to + 32	
Subtropical	ST	+ 16 to + 38	+ 18 to + 38	
Tropical	Т	+ 16 to + 43	+ 18 to + 43	

Dimensions and Clearances


Too small of a distance from adjacent items may result in the degradation
of freezing capability and increased electricity costs. Allow over 100 mm of
clearance from each adjacent wall when installing the appliance.

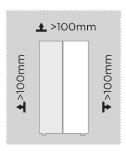

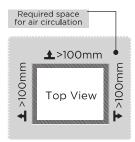

ATTENTION

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor.

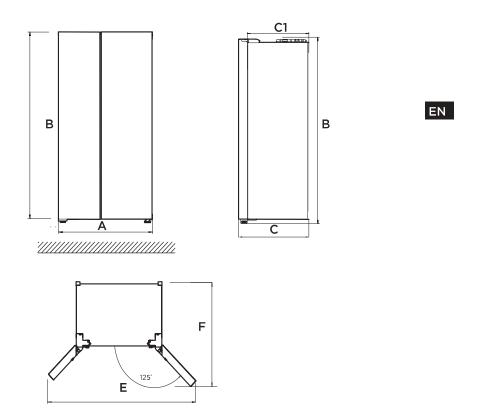

Width	Overall Height	Depth	Depth Only Cabinet	Depth doors open 125°	Width doors open 125°
А	В	С	C1	F	Е
910	1793	698	610	1010	1470

Notice: All dimensions in mm

To avoid vibration, the unit must be leveled.

If required, adjust the leveling screws to compensate for the uneven floor.

The front should be slightly higher than the rear to aid in door closing.


Leveling screws can be turned easily by tipping the cabinet slightly.

Turn the leveling screws counterclockwise \clubsuit to raise the unit, clockwise \clubsuit to lower it.

Leveling doors

If the doors are not at the same height, the door can be adjusted with a spanner.

- A- To raise the door, turn the nut 1 anticlockwise.
- B- To lower the door, turn the nut ① clockwise.
- C- When the door is correctly aligned, fix it with the nut 2.

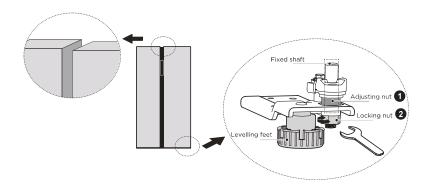

Moving the appliance

- 1. Remove all food from inside the appliance.
- 2. Pull the power plug out, insert and fix it into the power plug hook at the rear or on top of the appliance.
- 3. Tape parts such as shelves and the door handle to prevent falling off while moving the appliance.
- 4. Move the appliance with no less than 2 people carefully. When transporting the appliance over a long distance, keep the appliance upright.
- 5. After installing the appliance, connect the power plug into a socket to switch on the appliance.

ATTENTION

Precautions before operation:


Before making changes the refrigerator must be disconnected from power precautions should be taken to prevent any personal injury.

ΕN

Instructions for water tank use and addition

Steps of adding water:


- 1. Pull out the water tank from the refrigerator.
- 2. Open the water-injection cover.
- 3. Add bottled drinking water or alkaline water, without exceeding the Max level.

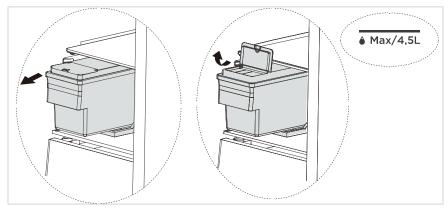

EN

ATTENTION

- Do not exceed the max line. Water overflows.
 Fill the tank only with potable water such as mineral or purified water. Do not use other liquid. It is not allowed to add juice, milk and cola in the water tank.
- 4. Close the water-injection cover filtered water.
- 5. Push the water tank inside until it is fixed.

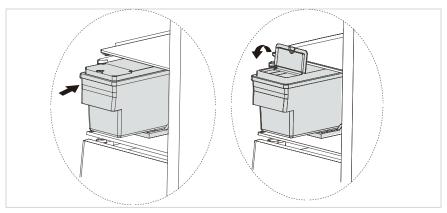


ATTENTION

- After the water tank is pushed in, please wait for 30s before taking the first cup of water,
 Make sure the water tank fits into the shelf. Otherwise, the water tank may not operate

- Do not use the refrigerator without inserting the water tank. This may decrease the cooling performance.

Install the limit block

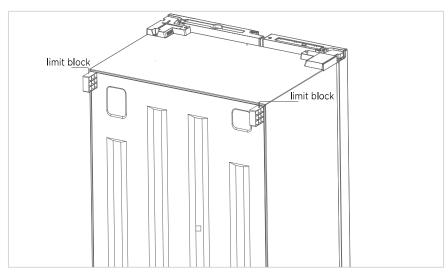

- The limit block is included in the attachment package.
- In order to better dissipate heat from the back condenser and reduce the power consumption of the refrigerator, it is necessary to install limit blocks on the refrigerator.
- Take out the limit block from the attachment package, tear off the adhesive backing paper, and apply it along the upper corner of the back, one on each corner.

Changing the light

• Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.

ATTENTION

This product contains two light sources of energy efficiency class (G).

Connecting the appliance

After installing the appliance, connect the power plug into a socket outlet.

ATTENTION


After connecting the power supply cord (or plug) to the outlet, wait 2 or 3 hours before you put food into the appliance. If you add food before the appliance has cooled completely, your food may spoil.

Tips for energy saving

- Do not place the appliance near cookers, radiators or other heat sources. If the
 ambient temperature is high, the compressor will run more frequently and for longer,
 resulting in increased energy consumption.
- Ensure that there is sufficient ventilation at the base of the appliance, on the sides of the appliance and at the back of the appliance. Never cover ventilation openings.
- · Please also observe the spacing dimensions in the chapter "Installation".
- The arrangement of drawers, shelves and racks as shown in the illustration offers the
 most efficient use of energy and should therefore be retained as far as possible. All
 drawers and shelves should remain in the appliance to keep the temperature stable
 and save energy.
- To obtain a larger storage space (e.g. for large refrigerated/frozen goods), the middle drawers can be removed. The top and bottom drawers and shelves should be removed last if necessary.
- An evenly filled refrigerator/freezer compartment contributes to optimal energy use.
 Therefore, avoid empty or half-empty compartments.
- Allow warm food to cool before placing it in the refrigerator/freezer. Food that has already cooled down increases energy efficiency.
- Allow frozen food to defrost in the refrigerator. The coldness of the frozen food reduces the energy consumption in the refrigerator compartment and thus increases the energy efficiency.
- Open the door only as briefly as necessary to minimise cold loss. Opening the door briefly and closing it properly reduces energy consumption.
- Setting the temperature no colder than necessary contributes to optimal energy use.
 The optimum temperature in the refrigerator is +7°C. It should be measured as far forward as possible in the top compartment of refrigerators.
- The door seals of your appliance must be perfectly intact so that the doors close properly and energy consumption is not increased unnecessarily.



OPERATION INSTRUCTIONS

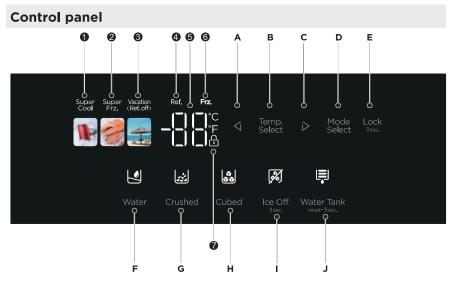

Disp	lay		
1	Super Cooling	5	Temperature display icon
2	Super Freezing	6	Freezer compartment temperature
3	Vacation icon	7	Lock/Unlock
4	Refrigerating compartment temperature		
Butt	on		
Α	Temperature down button	F	Cold water mode
В	Temperature zone selection button	G	Ice crushing mode
С	Temperature up button	Н	Ice cube mode
D	Mode configuration button	1	On / off button for icemaker
E	Lock/Unlock button	J	Water tank warning reset

ATTENTION

The actual control panel may differ from model to model. The control panel will turn off automatically for energy saving.

Lock ⊕ / unlock

Vacation mode

- Click the button Mode Select to enter the vacation mode. Icon Vacation (Ref. off) lights up, the vacation mode will start after locking the control panel.
- Under vacation mode, the refrigerating compartment is turned off and temperature area display "--" the freezer compartment temperature is set at -18 °C.

EN

Super Cooling mode 1

Click the button Select to enter the Super cooling mode. Icon Cool lights up, the Super Cooling mode will start after locking the control panel. Super cooling exits up to 6h or exits after 30 minutes of reaching the super cooling shutdown point.

Super Freezing mode

Click the button Select to enter the Super freezing mode. Icon Frz. lights up, the Super freezing mode will start after locking the control panel. Super freeze exits for 26h.

Temperature setting of refrigerating compartment

Click temperature zone selection button Select, refrigerating compartment temperature will blink. Then click the button of or again to set the temperature, and will hear one beep. Setting scope is between 2°C and 8°C. Every time you click the button, the temperature will be changed 1°C. After adjusting, the digital tube will keep blinking for 5 seconds. New temperature setting will take effect after locking the control panel.

Temperature setting of freezer compartment

• Click temperature zone selection button Select, freezer compartment temperature will blink. Then click the button of or again to set the temperature, and you will hear one beep. Setting scope is between -16°C and -24°C. Every time you click the button, the temperature will be changed 1°C. After adjusting, the digital tube will keep blinking for 5 seconds. New temperature setting will take effect after locking the control panel.

ATTENTION

Recommended setting: Refrigerated chamber 5°C, freezing chamber - 18°C.

The Super freezing function is designed to maintain the nutritional value of the food in the freezer. It can freeze the food in the shortest time. If a large amount of food is frozen at one time, it is recommended that the user turn on the Super freezing function and put the food in. At this time, the freezing speed of the freezer compartment is increased, which can Super freezing the food, effectively lock the nutrition of the food, and facilitate storage,

Storage upon power failure

• In case of power failure, the instant working state will be locked and maintained till re-electrification.

Opening warning and alarm control

 when open the refrigerator doors, the opening music will play. If the door is not closed in two minutes, the buzzer will sound once every minute until the door is closed. Press anyone button to stop the buzzer alarm.

ATTENTION

Disable the door opening tone: Press and hold the combination key \triangleleft and \triangleright for 3 seconds to disable or enable the door opening tone (the tone is enabled by default). Disable the door opening alarm sound: Not possible


Error code

The following warnings appearing on the display indicate corresponding faults
of the refrigerator. Though the refrigerator may still have cold storage function
with the following faults, the user shall contact a maintenance specialist for
maintenance, so as to ensure optimized operation of the appliance.

Fault Code	Fault Description
EO	Icemaker error
E1	Temperature sensor detection circuit error of refrigerating chamber
E2	Temperature sensor detection circuit error of freezing chamber
E5	Freezing defrost sensor detection circuit error
E6	Communication fault of main board and Display control panel
E7	Circulation of ambient temperature sensor detection circuit error
EE	Icemaker sensor circuit error
EH	Moisture sensor error
EP	Ice-separating fault of icemaker
EF	Water tank loose error

Fetching water and ice


Fetching cold water

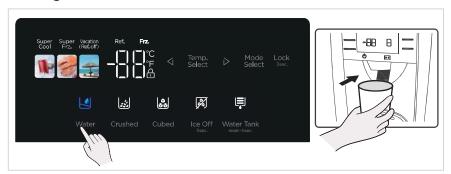

EN

- Keep clicking the buttons "Water" until the icon " " turns on.
- Push the container in the direction of fetching water cushion,Cold water starts to flow into the container.
- Remove the container from fetching water cushion and end the exporting of water.

Fetching crushed ice

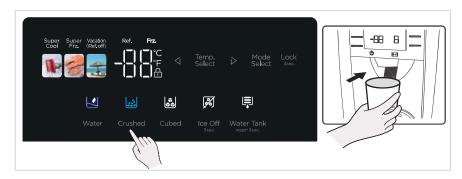

- Keep clicking the buttons "Crushed" until the icon " " turns on.
- Make the container tight with mouth of dispenser to prevent the side jet.
- Press the container in the direction of fetching water cushion. Fill the container with crushed ice.
- Remove the container from fetching water cushion and end the exporting of crushed ice.

Fetching ice cubes



- Keep clicking the buttons "Cubed" until the icon " " turns on.
- Push the container in the direction of fetching water cushion.
- · Ice cubes start to fall into the container.
- Remove the container from fetching water cushion and end the exporting of ice cubes.

Cancel the function of ice-making



- If the function of fetching ice is not used for long time, you can cancel the function of ice-making.
- Press the button "lee Off", the icon "

 "" " turns on.

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor.

Tips on storing food

Freezer compartment

- The freezer is designated for the storage of food frozen at very low temperature, long-term storage of frozen food, and for the production of ice.
- Only use the shelves in the door of the freezer to store frozen food, not for storing hot food designated for freezing.
- Do not put fresh and frozen food next to each other. The frozen food may thaw.
- When freezing fresh food (such as meat, fish or chopped meat), cut them into parts that can be used at the same time.
- Storing frozen food: instructions are usually stated on the packages, which must be
 followed. If there is no information on the packaging, food should not be stored for
 longer than three months from the date of purchase.
- When purchasing frozen food, make sure that it was frozen at a suitable temperature and that the packaging is not damaged.
- Frozen food should be kept in suitable packages to retain the quality and should be returned to the freezer compartment as soon as possible.
- If a package of frozen food shows moisture or abnormal bulging, it is probable that it was stored at the wrong temperature and the content is spoiled.
- The storage period for frozen food depends on the room temperature, the
 thermostat setting, the frequency of opening the door of the freezer, the type of
 food and the time of transporting the product from the shop to the household.
 Always follow the instructions printed on the packaging and never exceed the
 maximum storage time stated on the package.

Cooling compartment

- To reduce moisture and subsequent ice build-up, never put liquid into the refrigerator in unsealed containers. Frost tends to concentrate in the coolest parts of the evaporator. Storing uncovered liquids results in a more frequent need for defrosting.
- Never put warm foods in the refrigerator, These should first cool down at room temperature and then be placed so as to ensure adequate air circulation in the refrigerator.
- Foods or food containers should not touch the back wall of the refrigerator because they could freeze to the wall. Do not keep regularly opening the door of the refrigerator.
- Meat and clean fish (packed in a package or plastic foil) can be placed in the refrigerator, which can be used in 1–2 days.
- Fruit and vegetables without packaging can be placed in the part designated for fresh fruit and vegetables.

Recommended Temperature

The optimal temperature setting for food storage:

• Fridge: 4 °C , Freezer: -18 °C

ATTENTION

The optimal temperature setting of each compartment depends on the ambient temperature. Above optimal temperature is based on the ambient temperature of 25 $^{\circ}$ C.



Order	Compartments TYPE	Target stor- age temp. [°C]	Appropriate food
1	Fridge	+2 ~ +8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, drinks and other foods are not suitable for freezing.
2	(***)*-Freezer	≤-18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
3	***-Freezer	≤-18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
4	**-Freezer	≤-12	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
5	*-Freezer	≤-6	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
6	O-star	-6 ~ O	Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (Recommended to eat within the same day, preferably no more than 3 days). Partially encapsulated processed foods (nonfreezable foods).
7	Chill	-2 ~ +3	Fresh/ frozen pork, beef, chicken, freshwater aquatic products, etc. (7 days below 0°C and above 0°C is recommended for consumption within that day, preferably no more than 2 days). Seafood (less than 0 for 15 days, it is not recommended to store above 0°C.
8	Fresh food	0 ~ +4	Fresh pork, beef, fish, chicken, cooked food, etc. (Recommended to eat within the same day, preferably no more than 3 days)
9	Wine	+5 ~ +20	Red wine, white wine, sparkling wine, etc.

ATTENTION

please store different foods according to the compartments or target storage temperature of your purchased $\,$

CLEANING AND MAINTENANCE


Defrosting

• The refrigerator is made based on the air-cooling principle and thus has automatic defrosting function. Frost formed due to change of season or temperature may also be manually removed by disconnection of the appliance from power supply or by wiping with a dry towel.

EN


Cleaning of the door tray

- According to the direction arrow in the figure below, use both hands to squeeze the tray, and push it upward, then you can take it out.
- After washing the tray having been taken out, you can adjust its installing height in accordance with your requirement.

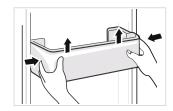


Cleaning of the glass shelf

- As the innermost part of the refrigerator liner where contacting the shelves has a backstop, you shall raise the shelves upward, then you can be able to take it out.
- Adjust or clean the shelves according to your requirement.

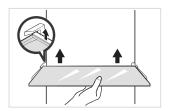

Cleaning the Fruits and vegetables box

- Remove the contents of the drawer. Hold the handle of the fruits and vegetables box and pull it out completely until it stops.
- Lift the the fruits and vegetables box up and remove it by pulling it out.

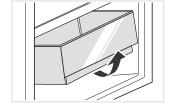


ATTENTION

Soft towels or sponge dipped in water and non-corrosive neutral detergents are suggested for cleaning. The freezer of shall be finally cleaned with clean water and dry cloth. Open the door for natural drying before the power is turned on. Do not use hard brushes, clean steel balls, wire brushes, abrasives, such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items clean refrigerator considering that this may damage the fridge surface and interior.

Clean the Ice Container

Ice in the ice container may block the outlet because of lumping or other reasons. In this case the ice container needs cleaning or eliminating block.

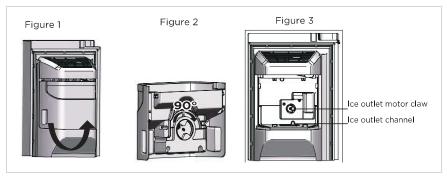

- 1. When the ice on light goes out,hold the left and right clasps of the ice storage box with both hands, and move the ice storage box vertically to get it out of the limit buckle, and then slowly remove the ice storage box along the vertical door liner, as shown in Figure 1
- 2. Clean the ice storage box as needed. The installation process of the ice storage box is contrary to the removal process. Pull the ice storage box downwards forcefully until it is installed in place. If it is difficult to install the ice storage box, turn the turntable on the ice storage box 90° according to Figure 2, and then install the ice storage box.

Cleaning of Ice lattice and water pipe

- Ice making function if not used for a period of time, before using again. Please
 empty the ice in the ice storage box, make half a box of ice(about 24h) and
 dump it again, then you can use it normally.
- If the water intake function is not used for a period of time, before using again, please press the water intake operation to take two liters of water, and then normal use.

TROUBLESHOOTING

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not solved.

Problem	Possible reason
	Check whether the appliance is connected to power or whether the plug is in well contact
Failed operation	Check whether the voltage is too low
	• Check whether there is a power failure or partial circuits have tripped
	Odorous foods shall be tightly wrapped
Odor	Check whether there is any rotten food
	Clean the inside of the refrigerator
	Long operation of the refrigerator is normal in summer
Long-time operation	when the ambient temperature is high it is not suggestible having too much food in the appliance at the same time
of the compressor	Food shall get cool before being put into the appliance
	• The doors are opened too frequently
Light fails to get lit	Check whether the refrigerator is connected to power supply and whether the illuminating light is damaged
Light falls to get lit	Have the light replaced by a specialist
Door can not be properly closed	The door is stuck by food packages too much food is placed
	• The refrigerator is tiltedr.
Loud noises	Check whether the floor is level and whether the refrigerator is placed stably
	Check whether accessories are placed at proper locations

EN

Problem	Possible reason
Door seal fails to be tight	• Remove foreign matters on the door seal
	Heat the door seal and then cool it for restoration (or blow it with an electrical drier or use a hot towel for heating)
Water pan overflows	There is too much food in the chamber or food stored contains too much water,resulting in heavy defrosting
	• The doors are not closed properly, resulting in frosting due to entry of air and increased water due to defrosting
Hot housing	Heat dissipation of the built-in condenser via the housing, which is normal when housing becomes hot due to high ambient temperature, storage of too much food or shutdown of the compressor is shut down, provide sound ventilation to facilitate heat dissipation
Surface condensation	Condensation on the exterior surface and door seals of the refrigerator is normal when the ambient humidity is too high. Just wipe the condensate with a clean towel.
Abnormal noise	• Buzz: The compressor may produce buzzes during operation, and the buzzes are loud particularly upon start or stop. This is normal.
	Creak: Refrigerant flowing inside of the appliance may produce creak, which is normal.

APPENDIX

Special for new European standard

The ordered parts in the following table can be acquired from Service provider channel

Ordered part	Provided by	Minimum time required for Provision
Thermostats	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Temperature sensors	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Printed circuit boards	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Light sources	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Door handles	Professional repairers and final users	At least 7 years after the last model is launched on the market
Door hinges	Professional repairers and final users	At least 7 years after the last model is launched on the market
Trays	Professional repairers and final users	At least 7 years after the last model is launched on the market
Baskets	Professional repairers and final users	At least 7 years after the last model is launched on the market
Door gaskets	Professional repairers and final users	At least 10 years after the last model is launched on the market

ΕN

Dear customer

1. If you want to return or replace the product, please contact the store where you

(Remember to bring the purchase invoice)

2. If your product breaks down which needs to repair, please contact after-sales service provider.

ATTENTION

The model information in the product database, as well as the model identifier, can be obtained througha weblink scanned by a QR code, if any, on the energy efficiency label of the


For more information about the energy efficiency of the appliance, visit https://ec.europa.eu and search using the model name.

The model name can be found on the rating label of the appliance.

Coldest zone in the refrigerator

OPTIONAL: OK-temperature indicator

 The OK-temperature indicator can be used to determine temperatures below +4°C. Gradually reduce the temperature if the sign does not indicate "OK".

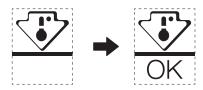

 To ensure the temperature in this area, do not change the positioning of the shelf. Inforced air refrigerators (equipped with a fan or No Frost models),the symbol of the coldest zone is not represented because the temperature inside is homogeneous.

Temperature indicator setting

- To help you set your refrigerator well, it is equipped with a temperature indicator that will monitor the average temperature in the coldest zone.
- WARNING:This indicator is intended to work only with your refrigerator, do not use
 it in another refrigerator (in fact, the coldest zone is not the same), or for any other
 use

Checking the temperature in the coldest zone

- With the temperature indicator, you can check regularly that the temperature of
 the coldest zone is correct. Indeed, the internal temperature of the refrigerator
 depends on several factors such as the ambient temperature of the room, the
 amount of food stored and the frequency of door opening. Take these factors
 into consideration when setting the device.
- When the indicator shows « OK », this means that your thermostat is well adjusted and the internal temperature correct.
- If the indicator of temperature turns WHITE, this means that the temperature is too high; in this case, increase the refrigerator temperature control setting and wait for 12 hours before performing a new visual inspection of the indicator. When fresh food has been introduced or the door has been left open, it is possible for the indicator of temperature to turn WHITE after a while.